




## LEDs overview of the LANCOM 1936VAG

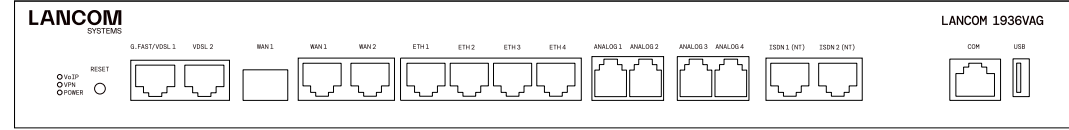

- 1 VoIP / VPN / POWER
- 2 RESET
- 3 G.FAST / VDSL 1 / VDSL 2
- 4 WAN 1 / WAN 2
- 5 ETH 1 - ETH 4
- 6 ISDN 1 (NT) / ISDN 2 (NT)

### 1 VoIP / VPN / POWER

|                                |  |
|--------------------------------|--|
| Off                            | No SIP accounts defined or VCM is off  |
| Green, permanently             | All defined and active SIP accounts (outgoing) were successfully registered                |
| Red, permanently               | Not all of the defined and active SIP accounts were registered (possibly still in process) |
| Red or green, inverse flashing | Number of currently used lines (connecting or connected)                                   |
| <b>VPN</b>                     |  |
| Off                            | VPN connection inactive  |
| Green, permanently             | VPN connection active  |
| Green, flashing                | VPN connecting   |

### POWER

|                       |  |
|-----------------------|--|
| Off                   | Device switched off  |
| Green, permanently*   | Device operational, resp. device paired / claimed and LANCOM Management Cloud (LMC) accessible |
| Green / red, blinking | No password set. Without a password the configuration data in the device is unprotected.       |

|                            |  |
|----------------------------|--|
| Red, blinking              | Charge or time limit reached                                 |
| 1x green inverse blinking* | Connection to the LMC active, pairing OK, device not claimed |
| 2x green inverse blinking* | Pairing error, resp. LMC activation code not available       |
| 3x green inverse blinking* | LMC not accessible, resp. communication error                |

### 2 RESET

|              |   |
|--------------|---|
| Reset button | short press > Restart the device<br>long press > Reset the device |
|--------------|---|

### 3 G.FAST / VDSL 1 / VDSL 2

|  |                       |
|--|-----------------------|
| Off                                    | Interface deactivated |
| Green, blinking                        | DSL connecting        |
| Green, permanently                     | DSL connection active |
| Green, flickering                      | DSL data transfer     |
| Green / orange, flickering             | DSL transfer error    |
| Green / orange, blinking synchronously | DSL hardware error    |
| Orange, blinking                       | DSL training          |
| Orange, permanently                    | DSL sync              |

### 4 WAN 1 / WAN 2

|                     |  |
|---------------------|--|
| Green, orange off   | No networking device connected                                 |
| Green, permanently  | Connection to network device operational, no data transmission |
| Green, flickering   | Data transmission  |
| Orange off          | 1000 Mbps  |
| Orange, permanently | 10 / 100 Mbps  |

### 5 ETH 1 - ETH 4

|                     |   |
|---------------------|---|
| Green, orange off   | No networking device connected                            |
| Green, permanently  | Connection to network device operational, no data traffic |
| Green, flickering   | Data transmission   |
| Orange off          | 1000 Mbps   |
| Orange, permanently | 10 / 100 Mbps   |

### 6 ISDN 1 (NT) / ISDN 2 (NT)

|  |                        |
|--|------------------------|
| Off                                    | Interface deactivated  |
| Green, permanently                     | D-channel active       |
| Green, blinking                        | ISDN connection active |
| Orange, blinking                       | ISDN connecting        |
| Green / orange, blinking synchronously | ISDN hardware error    |
| Orange, permanently                    | Connection inactive    |

## Initial start-up

### Setting up the required connections for device configuration

- Connect the power supply to a power socket using the enclosed or another suitable IEC cable or the enclosed external power supply unit. Observe the safety instructions on the right.
- **Only for devices with integrated DSL modem:** If available and required, connect the G.FAST / VDSL / ADSL interfaces to a TAE socket of your provider using suitable cables.
- Use suitable cables or modules to connect other required device interfaces to other components and, in the case of devices with mobile radio and/or Wi-Fi interfaces, connect any antennas supplied.
- Depending on the device equipment, choose one of the following configuration methods a) or b)

#### a) Configuration via the LANCOM Management Cloud (LMC)

The LMC automatically rolls out the configuration to your device, provided it has access to the Internet. If a router that establishes the Internet connection should be added to the LMC, it may first be necessary to configure a basic configuration and an Internet connection via the local network, as described under b).

#### b) Configuration via the local network

Connect one of the ETH or LAN interfaces of the device via an Ethernet cable either to a network switch or directly to the network device intended for configuration (e.g. notebook). **The CONFIG or COM interface is not suitable for configuration via the network!**

### Options for initial start-up of the unconfigured device

#### → Option 1: via the LANCOM Management Cloud (LMC)

The LANCOM Management Cloud allows LANCOM partners to automate the commissioning, centralized management, and monitoring of LANCOM devices. Further information on commissioning and configuration via the LMC can be found at [www.lancom-systems.com/lmc-access](http://www.lancom-systems.com/lmc-access).

#### → Option 2: via web browser (WEBconfig)

Configuration via web browser is an easy and fast variant, since no additional software is required on the computer used for configuration.

**Note:** If a certificate warning appears in your browser when trying to connect to your device, there is a button or link on the displayed browser page to connect to the device anyway (depending on the browser, usually under **Advanced**).

In the following, select the description a) or b) that applies to your setup for configuring the device.

#### a) Configuration in a network without active DHCP server

For configuration via TCP/IP, the IP address of the device in the local network (LAN) is required. After power-on, an unconfigured LANCOM device first checks whether a DHCP server is active in the LAN.

The DHCP can be accessed from any computer with the Auto DHCP function enabled using a web browser under the IP address **172.23.56.254**. The given IP address can be modified at any time.

- When the computer is connected to an unconfigured LANCOM device, WEBconfig automatically starts the setup wizard **Basic settings**.
- After the setup wizard has been run through, the initial commissioning of the device is complete.
- If necessary, make further configurations using the setup wizards available for selection.

#### → Option 3: via the Windows software LANconfig ([www.lancom-systems.com/downloads](http://www.lancom-systems.com/downloads))

- Please wait until the booting process of the device is completed before starting LANconfig.
- Unconfigured LANCOM devices are automatically found by LANconfig in the local network (LAN) and the setup wizard **Basic settings** is then started.
- After the setup wizard has finished, the initial start-up of the device is complete.
- If necessary, make further configurations using the setup wizards available for selection.

## General safety instructions

- Under no circumstances should the device housing be opened and the device repaired without authorization. Any device with a case that has been opened is excluded from the warranty.
- If antennas are available, they may only be installed or replaced when the device is switched off. Mounting or demounting antennas while the device is powered on may cause the destruction of the radio module.
- Mounting, installation, and commissioning of the device may only be carried out by qualified personnel.

## Safety instructions and intended use

In order to avoid harming yourself, third parties or your equipment when installing your LANCOM device, please observe the following safety instructions. Operate the device only as described in the corresponding documentation. Pay particular attention to all warnings and safety instructions. Use only those third-party devices and components that are recommended or approved by LANCOM Systems.

Before commissioning the device, be sure to study the corresponding Hardware Quick Reference which can be downloaded from the LANCOM website [www.lancom-systems.com/downloads](http://www.lancom-systems.com/downloads).

Any warranty and liability claims against LANCOM Systems are excluded in the event of any use other than the intended use described below!

## Environment

LANCOM devices should only be operated when the following environmental requirements are met:

- Ensure that you comply with the temperature and humidity ranges specified in the Quick Reference Guide for the LANCOM device.
- Do not expose the device to direct sunlight.
- Ensure that there is adequate air circulation and do not obstruct the ventilation slots.
- Do not cover devices or stack them on top of one another
- The device must be mounted so that it is freely accessible (for example, it should be accessible without the use of technical aids such as elevating platforms); a permanent installation (e.g. under plaster) is not permitted.
- Only outdoor equipment intended for this purpose is to be operated outdoors.

## Power supply

Before start-up, the following points must be observed, as improper use can lead to personal injury and damage to property, as well as voiding the warranty:

- The mains plug of the device must be freely accessible.
- Operate the device only with a professionally installed power supply at a nearby and at all times freely accessible socket.
- Only use the enclosed power supply / IEC cable or the one listed in the hardware quick reference.
- A high touch current is possible for devices with metal housing and grounding screw! Before connecting the power supply, connect the grounding screw to a suitable ground potential.
- Some devices support power supply via an Ethernet cable (Power over Ethernet - PoE). Please refer to the corresponding notes in the hardware quick reference of the device.
- Never operate damaged components.
- Only switch on the device when the housing is closed.
- The device must not be installed during thunderstorms and should be disconnected from the power supply during thunderstorms.
- In case of emergency (e.g. damage, ingress of liquids or objects, for example through the ventilation slots), disconnect the power supply immediately.

## Applications

- The devices may only be used in accordance with the relevant national regulations and under consideration of the legal situation applicable there.
- The devices must not be used for the actuation, control, and data transmission of machinery that, in case of malfunction or failure, may present a danger to life and limb, nor for the operation of critical infrastructures.
- The devices with their respective software are not designed, intended or certified for use in: the operation of weapons, weapons systems, nuclear facilities, mass transportation, autonomous vehicles, aircraft, life support computers or equipment (including resuscitators and surgical implants), pollution control, hazardous materials management, or other hazardous applications where failure of the device or software could lead to a situation in which personal injury or death could result. The customer is aware that the use of the devices or software in such applications is entirely at the customer's risk.

## Declarations of Conformity

You will find all the Declarations of Conformity concerning our product portfolio under [www.lancom-systems.com/doc](http://www.lancom-systems.com/doc). These documents contain all the tested standards and required guidelines in the area of EMC - SAFETY - RF, as well as the proof of the guidelines concerning RoHS & REACH.

## CE Simplified Declaration of Conformity

Hereby, LANCOM Systems GmbH | Adenauerstrasse 20/B2 | D-52146 Wuersele, declares that this device is in compliance with Directives 2014/30/EU, 2014/35/EU, 2011/65/EU, and Regulation (EC) No. 1907/2006. The full text of the EU Declaration of Conformity is available at the following Internet address: [www.lancom-systems.com/doc](http://www.lancom-systems.com/doc)

## LANCOM FCC Regulatory Notice Class A Devices

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:  
(1) this device may not cause harmful interference, and  
(2) this device must accept any interference received, including interference that may cause undesired operation.  
**WARNING:**

This equipment has been tested and found to comply with the limits for a class A digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

The FCC declaration of conformity may be downloaded from [www.lancom.de/doc](http://www.lancom.de/doc) under the corresponding product section.

| Documentation / Firmware  | Service & Support  | All information on your device |
|---|--|--------------------------------|
| Basically, current versions of the LCOS firmware, drivers, tools and documentation for all LANCOM and AirLancer products are available for download free of charge from our website.                                      | The LANCOM Knowledge Base — with over 2,500 articles — is available to you at any time via the LANCOM website: <a href="http://www.lancom-systems.com/knowledgebase">www.lancom-systems.com/knowledgebase</a>                              |                                |
| You will also find explanations of all the functions of your LANCOM device in the LCOS Reference Manual: <a href="http://www.lancom-systems.de/docs/LCOS/Refmanual/EN/">www.lancom-systems.de/docs/LCOS/Refmanual/EN/</a> | If you have any further questions, please submit your request via our Service & Support portal: <a href="http://www.lancom-systems.com/service-support">www.lancom-systems.com/service-support</a>   |                                |
| All information on the interfaces and connection options of your device can be found under the following QR code in the <b>Hardware Quick Reference</b> :   | Information on the lifecycle, in particular on End of Sale / End of Life and on the supply of LANCOM devices with security updates can be found at: <a href="http://www.lancom-systems.com/lifecycle">www.lancom-systems.com/lifecycle</a> |                                |
| Package content   |  |                                |
| Cables  | 2 DSL cables for IP-based connection, 4.25 m or 2 DSL cables, 3 m (dark blue connectors), depending on the version; 1 Ethernet cable, 3 m (Kiwi colored connectors); 1 IEC power cord 230 V (not for WW devices)                           |                                |
| Adapters  | 4 TAE adapters (RJ11 - TAE)  |                                |
| Mounting brackets   | 2 19" brackets for rack mounting   |                                |